

TAITO

Silent Dragon

SPECIFICATIONS



TAITO AMERICA CORPORATION 390 HOLBROOK DRIVE
WHEELING, ILLINOIS 60090
PHONE: (708) 520-9280 FAX: (708) 520-1309

SILENT DRAGON

OPTION DIP-SWITCH SETTINGS

DIP SWITCH A		SWITCH POSITIONS							
FUNCTIONS	SETTINGS	1	2	3	4	5	6	7	8
NOT USED	OFF								
SCREEN POSITION	NORMAL	OFF							
	REVERSE	ON							
TEST MODE	NORMAL GAME	OFF							
	TEST MODE	ON							
ATTRACT SOUNDS	WITH	OFF							
	WITHOUT	ON							
PLAY PRICING	1 COIN = 1 PLAY	OFF	OFF						
	2 COINS = 1 PLAY	ON	OFF						
	3 COINS = 1 PLAY	OFF	ON						
	4 COINS = 1 PLAY	ON	ON						
BUY-IN PRICING	SAME AS PLAY PRICING	OFF	OFF						
	1 COIN = CONTINUE	ON	OFF						
	2 COINS = CONTINUE	OFF	ON						
	3 COINS = CONTINUE	ON	ON						

DIP SWITCH B		SWITCH POSITIONS							
FUNCTIONS	SETTINGS	1	2	3	4	5	6	7	8
DIFFICULTY LEVELS	AVERAGE	OFF	OFF						
	EASY	ON	OFF						
	DIFFICULT	OFF	ON						
	VERY DIFFICULT	ON	ON						
INVINCIBLE PLAYER MODE	WITHOUT	OFF							
	WITH	ON							
POWER-UP AT STAGE CLEAR	WITH	OFF							
	WITHOUT	ON							
REGAIN POWER	WITH	OFF							
	WITHOUT	ON							
COIN DOOR CONFIGURATION	1 COIN SLOT (SHARED)	OFF							
	4 COIN SLOT (1 PER PLAYER)	ON							
CABINET STYLE	3 PLAYERS	OFF	OFF						
	2 PLAYERS	ON	OFF						
	4 PLAYERS	OFF	ON						
	4 PLAYERS (2 CABINETS W/LINK-UP)	ON	ON						

BOLD TYPE INDICATES FACTORY RECOMMENDED SETTINGS.

SILENT DRAGON

JAMMA HARNESS CONNECTION CHART

SOLDER SIDE				COMPONENT SIDE	
FUNCTION	COLOR	EDGE CONNECTOR		COLOR	FUNCTION
GROUND	BLK	A	1	BLK	GROUND
GROUND	BLK	B	2	BLK	GROUND
+5VDC	RED	C	3	RED	+5VDC
+5VDC	RED	D	4	RED	+5VDC
-5VDC	BRN	E	5	BRN	-5VDC
+12VDC	BLU	F	6	BLU	+23VDC
KEY		H	7	KEY	
COIN METER B	WHT/VIO	J	8	BLU/BRN	COIN METER A
COIN LOCKOUT B		K	9		
SPEAKER (-)	BLK	L	10	WHT/BLK	SPEAKER (+)
		M	11		
VIDEO GREEN	GRN	N	12	RED	VIDEO RED
VIDEO SYNC	WHT	P	13	BLU	VIDEO BLUE
SERVICE SW	BRN/WHT	R	14	BLK	VIDEO GROUND
SLAM SW	WHT/BRN	S	15		
COIN B	GRN/YEL	T	16	WHT/YEL	COIN A
2PL SELECT	RED/BLK	U	17	PNK/BLK	1PL SELECT
2PL UP	BRN/BLU	V	18	ORN/BLU	1PL UP
2PL DOWN	ORN/WHT	W	19	GRN/ORN	1PL DOWN
2PL LEFT	ORN/GRN	X	20	GRN/BLU	1PL LEFT
2PL RIGHT	WHT/ORN	Y	21	RED/YEL	1PL RIGHT
2PL ATTACK	BRN/BLK	Z	22	RED/WHT	1PL ATTACK
2PL JUMP	YEL/WHT	a	23	WHT/RED	1PL JUMP
2PL SPECIAL	BRN/GRN	b	24	YEL/BLK	1PL SPECIAL
		c	25		
		d	26		
GROUND	BLK	e	27	BLK	GROUND
GROUND	BLK	f	28	BLK	GROUND

SILENT DRAGON


3RD AND 4TH PLAYER CONNECTION CHART

3RD PLAYER CONNECT	
PIN	FUNCTION
1	COIN 3
2	3P SELECT
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P ATTACK
8	3P JUMP
9	3P TRICK
10	
11	SERVICE
12	COIN METER 3
13	LOCKOUT 3
14	GROUND
15	GROUND

4TH PLAYER CONNECT	
PIN	FUNCTION
1	COIN 3
2	4P SELECT
3	4P LEFT
4	4P RIGHT
5	4P UP
6	4P DOWN
7	4P ATTACK
8	4P JUMP
9	4P TRICK
10	
11	
12	COIN METER 4
13	LOCKOUT 4
14	GROUND
15	GROUND

2ND MONITOR CONN. *	
PIN	FUNCTION
1	VIDEO RED
2	VIDEO GREEN
3	VIDEO BLUE
4	VIDEO SYNC
5	VIDEO GROUND

2ND SPEAKER CONN. *	
PIN	FUNCTION
1	SPEAKER (+)
2	SPEAKER (-)
3	

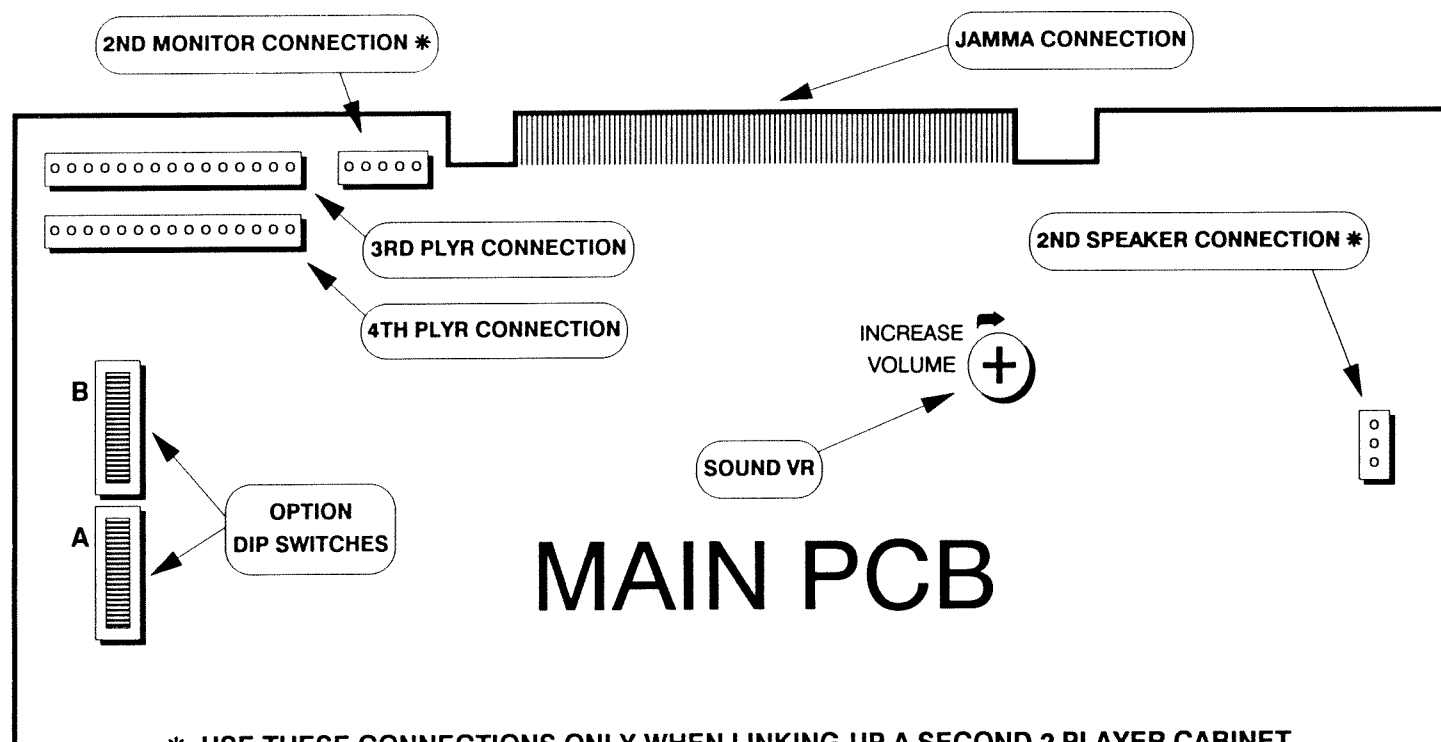

* USE THESE CONNECTIONS ONLY WHEN LINKING-UP A SECOND 2 PLAYER CABINET.

SILENT DRAGON

《OVERSEA VERSION》

【SETTING OF DIP SWITCH A】

		1	2	3	4	5	6	7	8
NOT USED		OFF							
SCREEN ROTATION	NORMAL		OFF						
	REVERSE		ON						
TEST MODE	NORMAL			OFF					
	TEST			ON					
ATTRACT SOUND	WITH				OFF				
	WITHOUT				ON				
PLAY PRICING (COIN A COIN B) (COIN C COIN D)	1COIN 1PLAY					OFF	OFF		
	2COIN 1PLAY					ON	OFF		
	3COIN 1PLAY					OFF	ON		
	4COIN 1PLAY					ON	ON		
NOT USED								OFF	
									OFF

【SETTING OF DIP SWITCH B】

		1	2	3	4	5	6	7	8
GAME DIFFICULTY	NORMAL	OFF	OFF						
	EASY	ON	OFF						
	HARD	OFF	ON						
	EXTRA HARD	ON	ON						
HIT OF PLAYERS	WITHOUT			OFF					
	WITH			ON					
CLEAR STAGE POWER UP	WITH				OFF				
	WITHOUT				ON				
REGAIN POWER	WITH					OFF			
	WITHOUT					ON			
SHOOTER	1SHOOTER						OFF		
	4SHOOTER						ON		
SETTING SELECT	3PLAY							OFF	OFF
	2PLAY							ON	OFF
	4PLAY							OFF	ON
	4PLAY (2P 2P)							ON	ON

ATTENTION) It must be main power "OFF"
if you operate dip switches.

CONNECTING DIAGRAM

3P CONNECTER

1	COIN 3
2	3P SELECT
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P ATTACK BUTTON
8	3P JUMP BUTTON
9	2P SPECIAL ATTACK
10	
11	SERVICE
12	COIN METER 3
13	LOCKOUT 3
14	GND
15	GND

4P CONNECTER

1	COIN 4
2	4P SELECT
3	4P LEFT
4	4P RIGHT
5	4P UP
6	4P DOWN
7	4P ATTACK BUTTON
8	4P JUMP BUTTON
9	4P SPECIAL ATTACK
10	
11	
12	COIN METER 4
13	LOCKOUT 4
14	GND
15	GND

G CONNECTER (JAMMA)

SOLDER-SIDE		PARTS-SIDE
GND	A 1	GND
GND	B 2	GND
+5V	C 3	+5V
+5V	D 4	+5V
-5V	E 5	-5V
+12V	F 6	+12V
POST	H 7	POST
COIN METER 2	J 8	COIN METER 1
COIN LOCKOUT 2	K 9	COIN LOCKOUT 1
SPEAKER (-)	L 10	SPEAKER (+)
SOUND GND	M 11	SOUND
VIDEO G	N 12	VIDEO R
VIDEO SYNC	P 13	VIDEO B
SERVICE SW	R 14	VIDEO GND
TILT SW	S 15	
COIN 2	T 16	COIN 1
2P SELECT	U 17	1P SELECT
2P UP	V 18	1P UP
2P DOWN	W 19	1P DOWN
2P LEFT	X 20	1P LEFT
2P RIGHT	Y 21	1P RIGHT
2P ATTACK BUTTON	Z 22	1P ATTACK BUTTON
2P JUMP BUTTON	a 23	1P JUMP BUTTON
2P SPECIAL ATTACK	b 24	1P SPECIAL ATTACK
	c 25	
	d 26	
GND	e 27	GND
GND	f 28	GND

M CONNECTER

1	VIDEO-RED
2	VIDEO-GREEN
3	VIDEO-BLUE
4	VIDEO-SYNC
5	VIDEO-GND

S CONNECTER

1	SOUND (+)
2	SOUND (-)
3	

